



UPS only: → OK, responds to Raspi

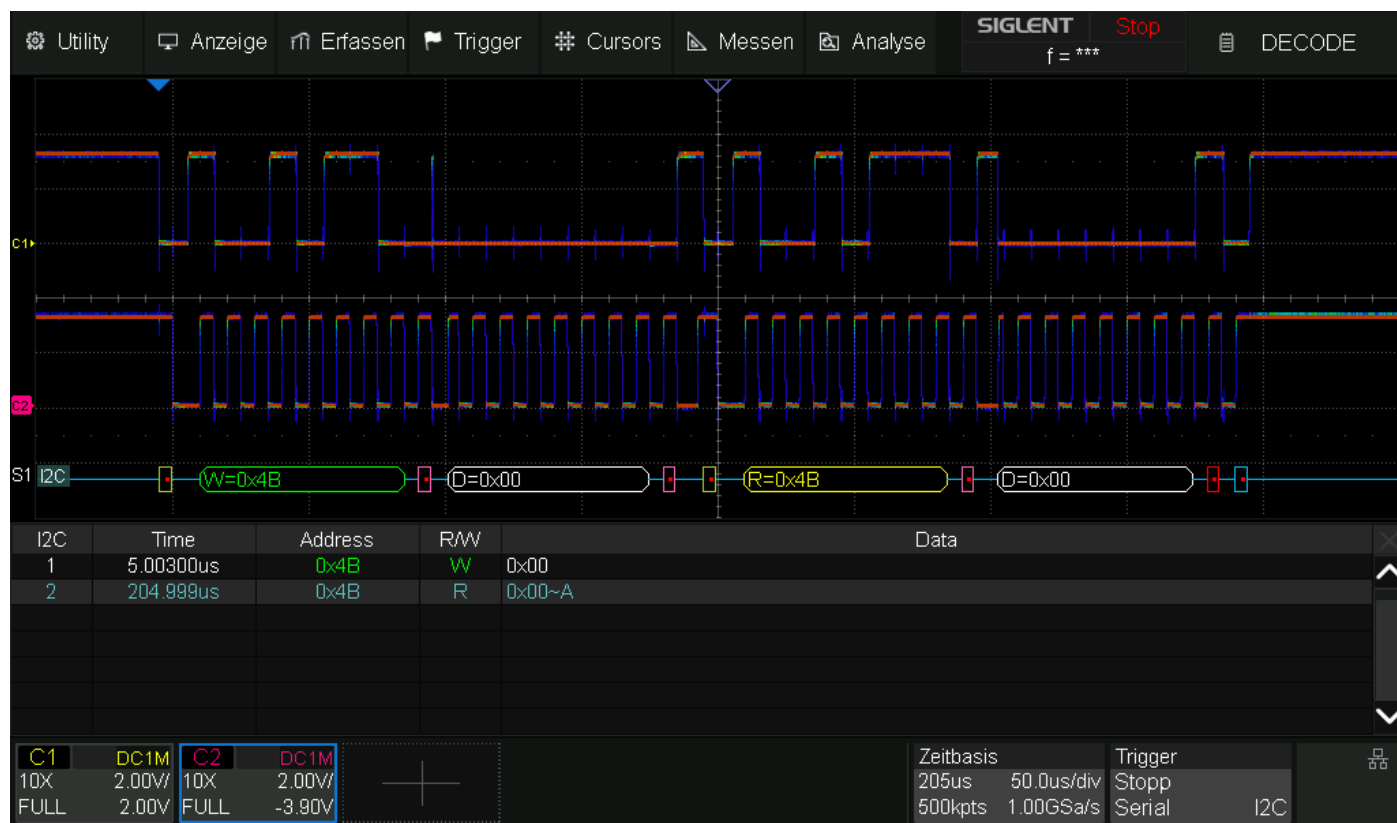

DSP: → OK, responds to Raspi

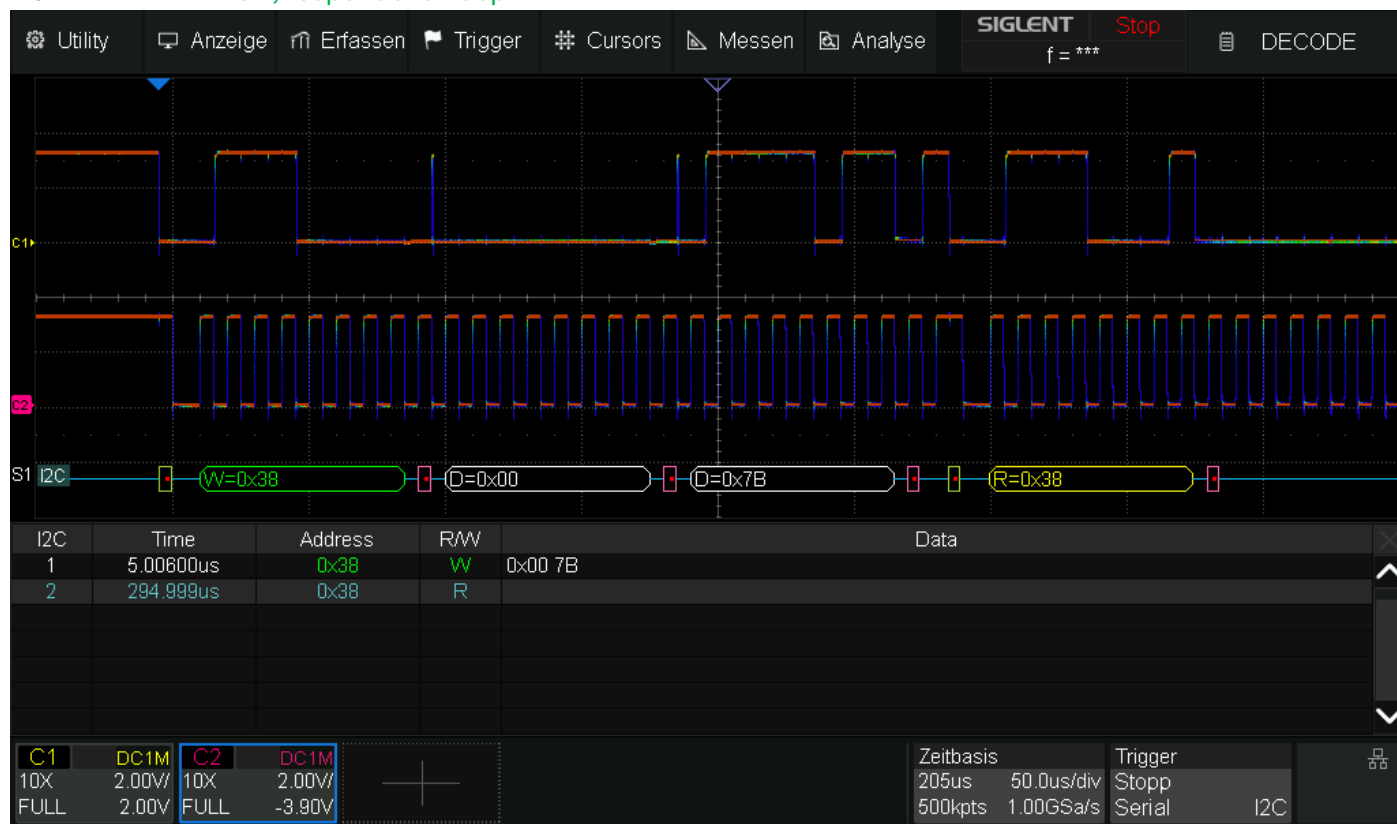

UPS only:

→ OK, responds to Raspi, releasest he bus properly




DSP:

→ OK, responds to Raspi, releasest he bus properly




Both together:

→ DSP responds, UPS not accessible, not shown with i2cdetect

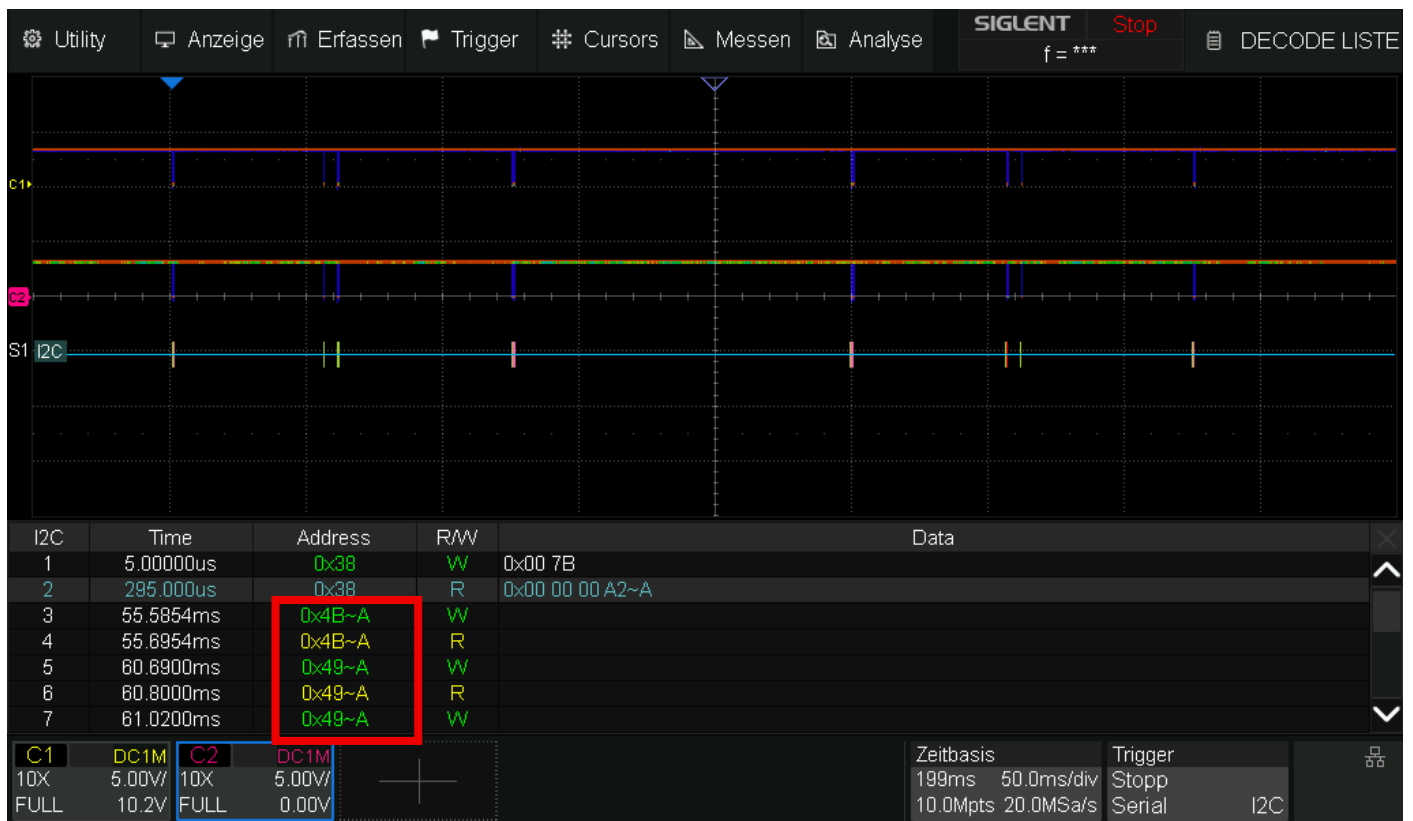

→ DSP responds, UPS not accessible, not shown with i2cdetect

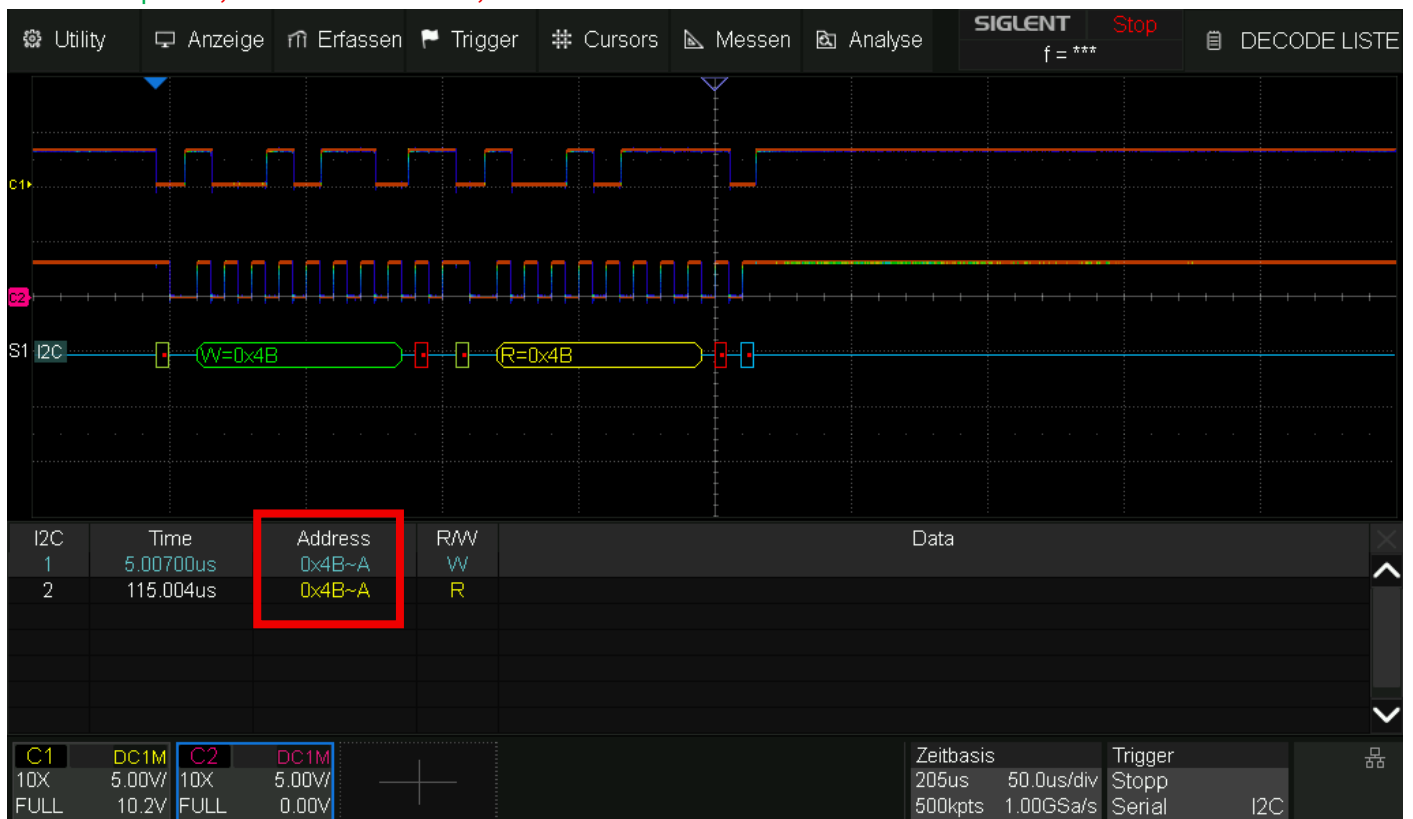

→ UPS seems to respond, but why the address with ~A ????????


→ I2cdetect doesn't find the UPS

→ No one holds the bus, bus is properly released



UPS Only: OK



Both: UPS not responding

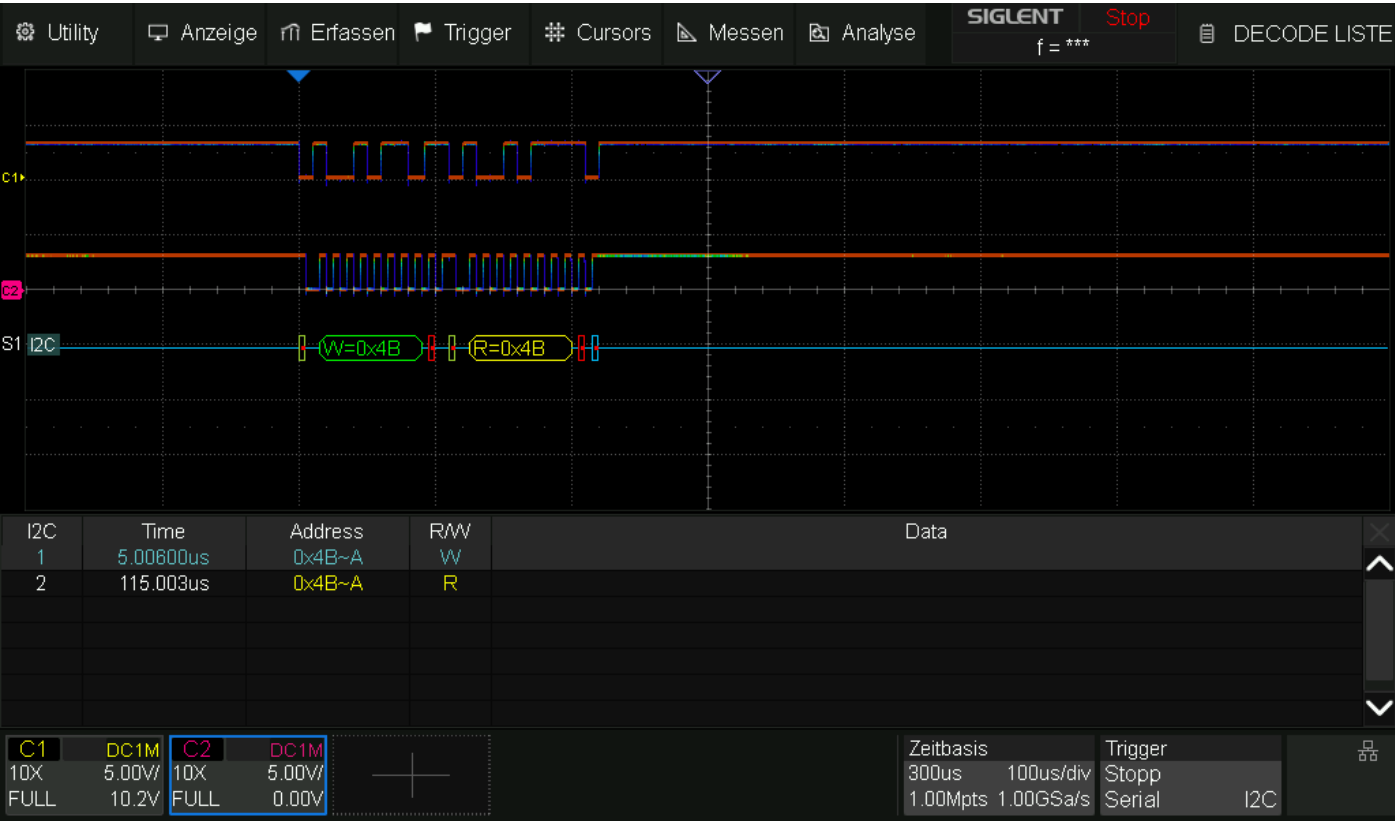

UPS:

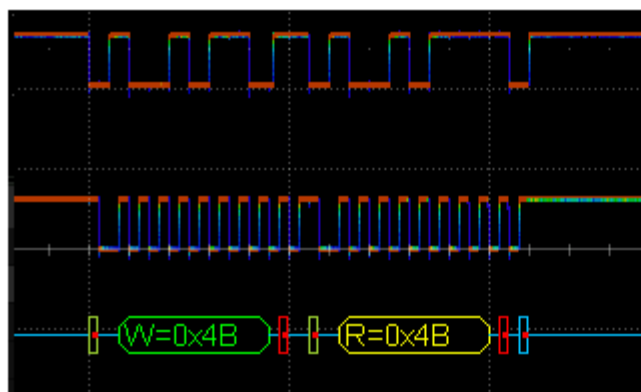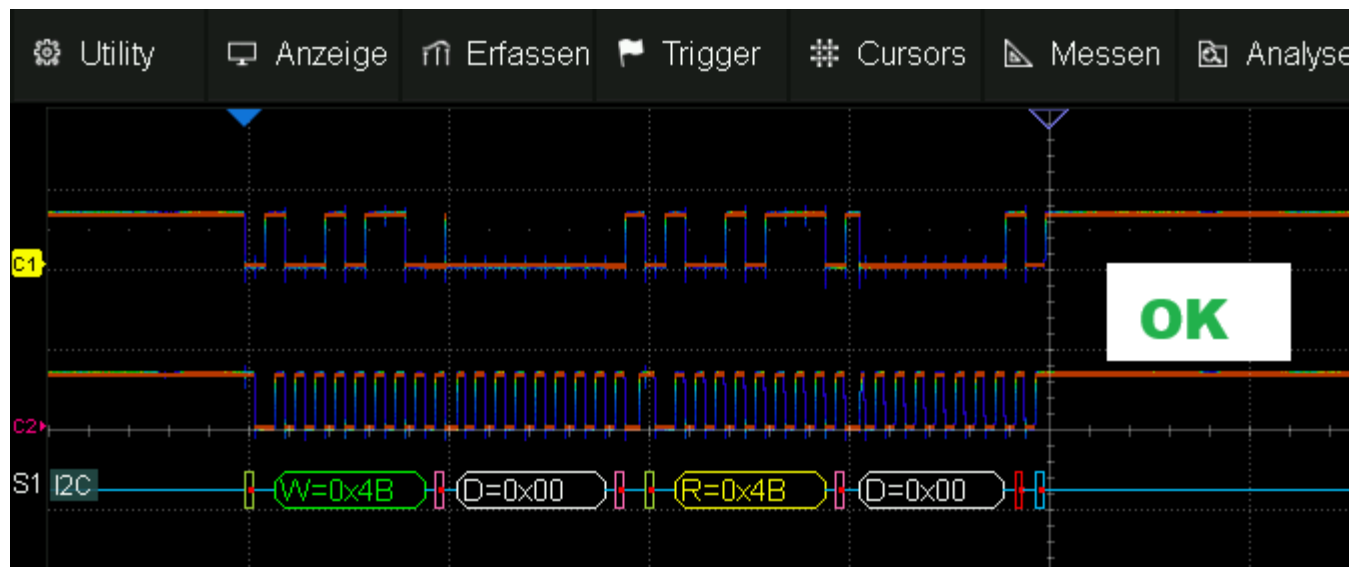

NOK